


Diesel heater

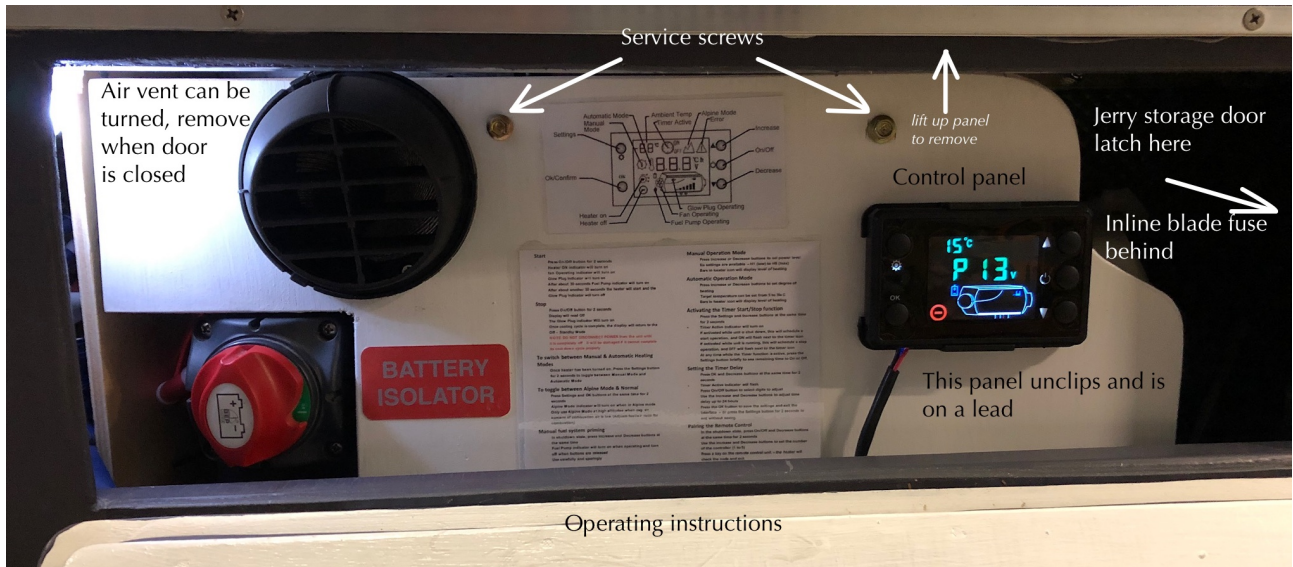

Installed is a 5kW heater with remote fob.
 The heater is installed in the tent side forward locker.
 When the tent is up the heater locker door lines up with the tent ventilation flap.

The flap is ripped up under the locker door to help keep the tent wall against the trailer. A air vent is attached to the air output port, this can be rotated to give air flow to a desired direction.

The cold air is sucked in to the right side of the locker. Since the tent is not seal up against the trailer quite a bit of out side fresh air is sucked in to. Make sure a window or door is open a little to let exhaust air out the tent. This also prevents condensation build up.

To operate the heater, first the heart switch on the switch panel must be on.
 Follow the instructions on the heater panel.

The air is very hot next to the air vent!

To shut down, hold down the power button on the heater control. **DONT SWITCH OFF THE HEATER SWITCH** till the heater has done it cool down. If you do damage may occur to the internal parts and soot will build up.

A 10L diesel tank is located in the jerry can storage areas



